



## INSTRUCTIONS

-SLIDE UP COVER TO EXPOSE CARTRIDGE -UNSCREW MOUTHPIECE, FILL CARTRIDGE, SCREW CARTRIDGE ONTO BATTERY -PRESS BUTTON FIVE TIMES TO TURN ON/OFF -PRESS BUTTON THREE TIMES FOR PREHEAT MODE, BUTTON WILL FLASH FOR 15 SECONDS, PRESS ONCE TO STOP PREHEAT MODE -HOLD BUTTON AND INHALE -TURN DEVICE OFF AFTER USE -BUTTON LIGHT WILL TURN OFF WHEN FULLY CHARGED